



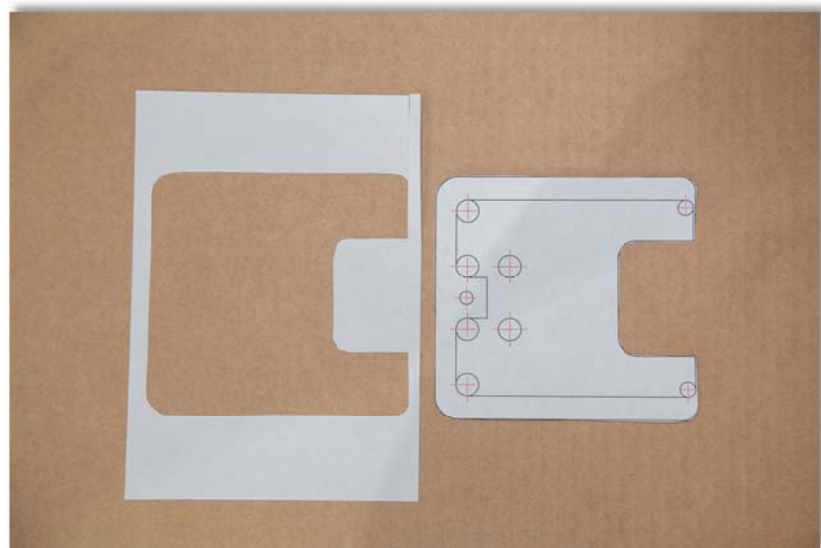

## AIR BOX OPENING INSTALL INSTRUCTION

1. - Cut out the entire perimeter from template

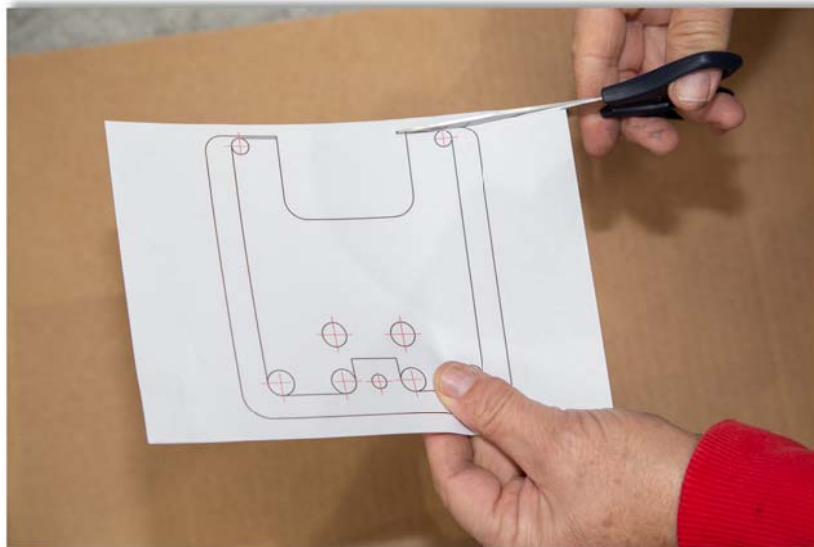



## AIR BOX OPENING INSTALL INSTRUCTION

2. – Insert the template at the bottom of the air box





## AIR BOX OPENING INSTALL INSTRUCTION

3. - Drill the nine center points with a 3mm drill bit



4. - Drill the two, 8 mm holes





## AIR BOX OPENING INSTALL INSTRUCTION

5. - Drill the six, 12 mm holes and one, 7 mm





## AIR BOX OPENING INSTALL INSTRUCTION

6. - Cut the air box, the white inner periphery of the template and leave the gray area.





## AIR BOX OPENING INSTALL INSTRUCTION

7. - Remove the cut part from inside of the air box.





## AIR BOX OPENING INSTALL INSTRUCTION

8. - insert the staple into the 7 mm hole as shown in the image





## AIR BOX OPENING INSTALL INSTRUCTION

9. - Put the lid on the opening of the box and screw it to the staple







## AIR BOX OPENING INSTALL INSTRUCTION

10. Done, the air filter maintenance window is finished

